



Current motion mode

Incoming UDP motion packets frequency

IP-address of the system

1. Start/stop motion button
2. Adjust motion intensity

Server status & Active preset

Firmware version & diagnostics

System temperature

Time left before firmware update required (void means never required)

Motion Intensity Setting (0-100)

Dimensions:
H 93 x W 43 x D 25 mm